

Griffith Chronograph Series (Emerald Sport) 39mm "Jack"

Care Instructions + Feature Guide | SKU: JACK | Built for the life you live.

Owner Guide

This guide covers the features, operation, and care of this Griffith chronograph. It is designed to help the owner set, use, and protect the watch properly.

Watch Specifications

Specification	Detail
Case Diameter	39mm
Movement	Seiko VK63 Meca-Quartz Chronograph
Chronograph	1/5-second timing with instant mechanical reset
Bezel	Fixed tachymeter bezel
Crystal	Scratch-resistant sapphire crystal
Case	Precision-finished stainless steel
Water Resistance	50M

Key Features

- Limited production chronograph
- Emerald sport dial execution
- Meca-quartz chronograph feel
- Fixed tachymeter bezel
- Sapphire crystal
- 24-hour indicator, running seconds, and chronograph counter

Movement + Operation

Topic	Instruction
Movement	Seiko VK63 meca-quartz chronograph. Hybrid timing platform with quartz accuracy and mechanical-style chronograph action.
Starting/Power	This movement is battery powered. If the watch stops, the battery should be replaced by a qualified watchmaker.
Setting the Time	Pull the crown to the time-setting position, rotate to the correct time, then push the crown fully back in.

Chronograph	Top pusher starts and stops the chronograph. Bottom pusher resets the chronograph only after it has been stopped.
Important	Do not reset the chronograph while it is running. Do not operate pushers underwater.

Care Instructions

- Avoid harsh chemicals, solvents, perfumes, and cleaning agents near the case, crystal, strap, and gaskets.
- Keep the watch away from strong magnetic fields, severe shock, and prolonged extreme temperatures.
- Wipe the case and crystal with a soft dry microfiber cloth after wear.
- Leather and suede straps should be kept as dry as possible; allow them to air dry naturally if damp.
- Rubber and stainless bracelets may be wiped down after sweat or water exposure, then dried thoroughly.
- Water resistance is not permanent and can be affected by impact, age, gasket wear, and crown position.
- Never operate the crown, chronograph pushers, or calendar correctors while the watch is wet or underwater.

Water-Resistance Notes

Listed water resistance: 50M. Water resistance ratings describe controlled test conditions, not a permanent guarantee against water entry. Always ensure the crown is fully pushed in or screwed down, if applicable, before exposure to moisture.

Warranty + Support

For support, care questions, setting help, or warranty assistance, contact Griffith Watch Company through griffithwatches.com. Keep your order information and warranty documentation with this guide.

Review Note

This customer-facing guide is prepared for product packaging and post-purchase support. Please verify final production specifications before bulk printing or fulfillment use.